# H 127, T 127, U 127



H 127 - Stroke counter

# Features - Stroke, piece and revolution counters - Adding - Display 5-digits (H 127, U 127) - Display 4-digits (T 127) - Manual reset by knurled knob

# Technical data - mechanical design



T 127 - Piece counter with lever

12345	

U 127 - Revolution counter

Technical data - mechanical design		
Display	White numbers on black	
Digit height	4.5 mm	
Zero setting	Reset by knurled knob	
Ambient temperature	0+60 °C	
Housing type	Surface mount housing with mounting plate	
Housing colour	Grey	
Dimensions W x H x L	40 x 29 x 27.5 mm	
Dimensions mounting plate 40 x 46 mm		
Mounting	Base plate, 2 long mounting holes	
Weight approx.	90 g	
Materials	Housing: Hostaform POM, grey Base blate: steel zinc-coated	

1

# **Totalizers mechanic**


# Stroke, piece and revolution counters Display 4- or 5-digits, reset button

H 127, T 127, U 127


Technical data - mechanical design	
H 127	
Function	Stroke counter
Number of digits	5-digits
Count mode	Adding in a stroke direction to be indicated. 1 stroke = 1 count
Drive shaft	Right or left, ø4 mm
Stroke	>38° to <60°
Stroke lever	To be positioned on shaft at will. Stroke lever relocates automatically to start position.
Stroke frequency	≤500 strokes/min
Measuring range	99 999
T 127	
Function	Piece counter with lever
Number of digits	4-digits
Count mode	1 button touch = 1 count
Drive shaft	Only available with lever provided at right
Stroke	>38° to <60°
Measuring range	9999
U 127	
Function	Revolution counter
Number of digits	5-digits
Count mode	Adding in a rotational direction to be indicated, subtracting in reverse direction. 1 rev. = 1 count
Drive shaft	Right or left, ø4 mm
Operating speed	≤2000 rpm
Measuring range	99 999
	-

#### **Direction of strokes and rotation**

## Drive on the right

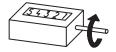

Reset button left Away from user Sense of rotation or stroke direction I

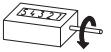

Reset button left Toward user Sense of rotation or stroke direction II

#### Drive on the left



Reset button right way from user Sense of rotation or stroke direction I




Reset button right Toward user Sense of rotation or stroke direction II

Reset button always opposite of drive.

# **Totalizers mechanic**

# Stroke, piece and revolution counters Display 4- or 5-digits, reset button

## H 127, T 127, U 127

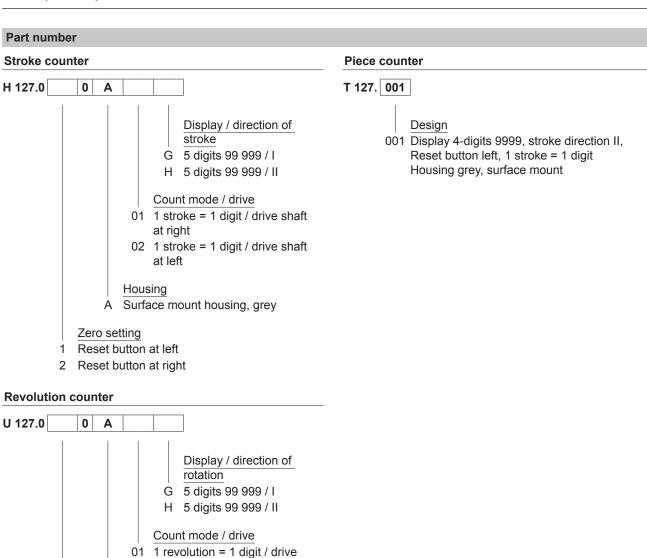

- Housing
- A Surface mount housing, grey

shaft at right

shaft at left

02 1 revolution = 1 digit / drive

#### Zero setting

- 1 Reset button at left
- 2 Reset button at right


# **Totalizers mechanic**


Stroke, piece and revolution counters
Display 4- or 5-digits, reset button

H 127, T 127, U 127

## **Dimensions**

## H 127, U 127

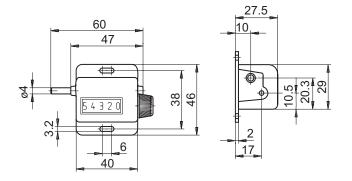

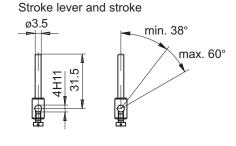

## T 127

